



# Air Top 2000 ST Air Heater



## OPERATING INSTRUCTIONS

### SWITCH ON

- Rotate heater control knob clockwise ↻ until indicator light illuminates.
- Heater delivers warm air after running 1 to 2 minutes.
- Heater will only start when set temperature is above sleeper temperature.



Heater Control Dial

### SET TEMPERATURE

- Rotate heater control knob for temperature adjustments.

↻ = more heat    ↻ = less heat

### SWITCH OFF

- Rotate heater control counterclockwise ↻ until it clicks and the indicator light turns off.
- Heater runs 2 minutes in cool down mode.

**NOTE:** Always make sure that air inlet/outlet grilles are not restricted. See Operating manual for complete details.

## TROUBLESHOOTING

If heater fails to start after 2 start attempts, check the following:

- POWER
  - ☑ Operational fuse.
  - ☑ Adequate voltage (11V to 13V).
  - ☑ Battery connections.
- FUEL
  - ☑ Fuel supply (level).
  - ☑ Fuel line restrictions.
  - ☑ Fuel gelling.
- FLASHING INDICATOR LIGHT/OVERHEAT
  - ☑ Air inlet/outlet grille restrictions.

## RESET HEATER

- SWITCH IT OFF AND BACK ON AGAIN

## MAINTENANCE

To ensure trouble-free operation of your Webasto heater, please observe the following:

- Operate heater for at least 20 minutes once a month.  
This keeps parts from seizing and lubricates the fuel pump.
- Keep fresh air inlet and outlet free of obstructions to prevent overheating.
- Keep combustion air inlet and exhaust outlet tube free of dirt and obstructions.
- Change fuel filter annually (or more often, if needed).

**Webasto Service Hotline: 1-800-860-7866**



Feel the Drive

Org. 06/1995 Rev. 1/2013 P/N 907101A